



MOD : EPE-6UN

Production code : T ANEMOS 6/CL UMI

04/2026

10. Exploded views and spare parts list

In order to simplify the breakdown search and any necessary replacement of damaged parts, we give a list of spare parts and exploded diagrams showing each of the listed parts.

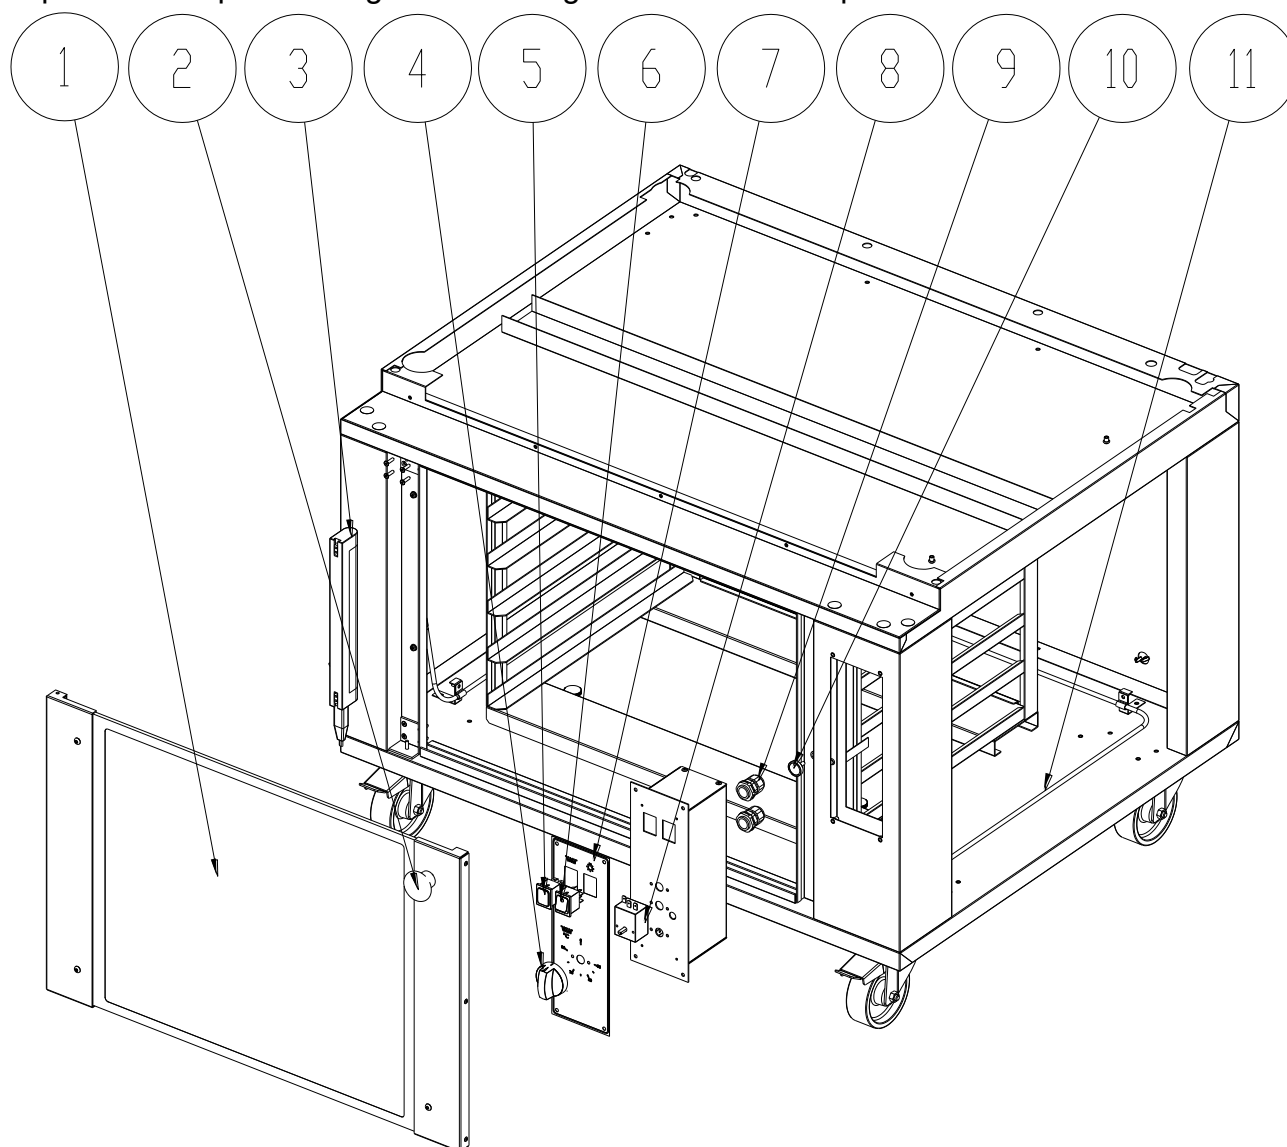


Fig. 10.1 Prover exploded view

N°	Description	Codes T ÀNEMOS E-G /CL H=710	Codes T ÀNEMOS E-G /CL H=1060	Codes COMBI T /CL H=530	Codes COMBI T /CL H=730
1	DOOR GLASS	CRIS0125	CRIS0128	CRIS0127	CRIS0124
2	DOOR HANDLE	MANI0091	MANI0091	MANI0091	MANI0091
3	LAMP	LAMP0048	LAMP0048	LAMP0048	LAMP0048
4	PROVER HEATING ELEMENT THERMOSTAT KNOB	MANI0110	MANI0110	MANI0110	MANI0110
5	LIGHT LAMP	LAMP0068	LAMP0068	LAMP0068	LAMP0068
6	BIP LIGHTING SWITCH 0-1	INTE0037	INTE0037	INTE0037	INTE0037
7	MEMBRANE CONTROL PANEL	PANN0524	PANN0524	PANN0524	PANN0524
8	PROVER HEATING ELEMENT THERMOSTAT	TERM0002	TERM0002	TERM0002	TERM0002
9	FAIRLEAD PG 13.5	ELET0090	ELET0090	ELET0090	ELET0090
10	DOOR MAGNET	MECC0578	MECC0578	MECC0578	MECC0578
11	PROVER HEATING ELEMENT	RESI0008	RESI0008	RESI0008	RESI0008

TAB. 10.1 Spare-parts list prover


 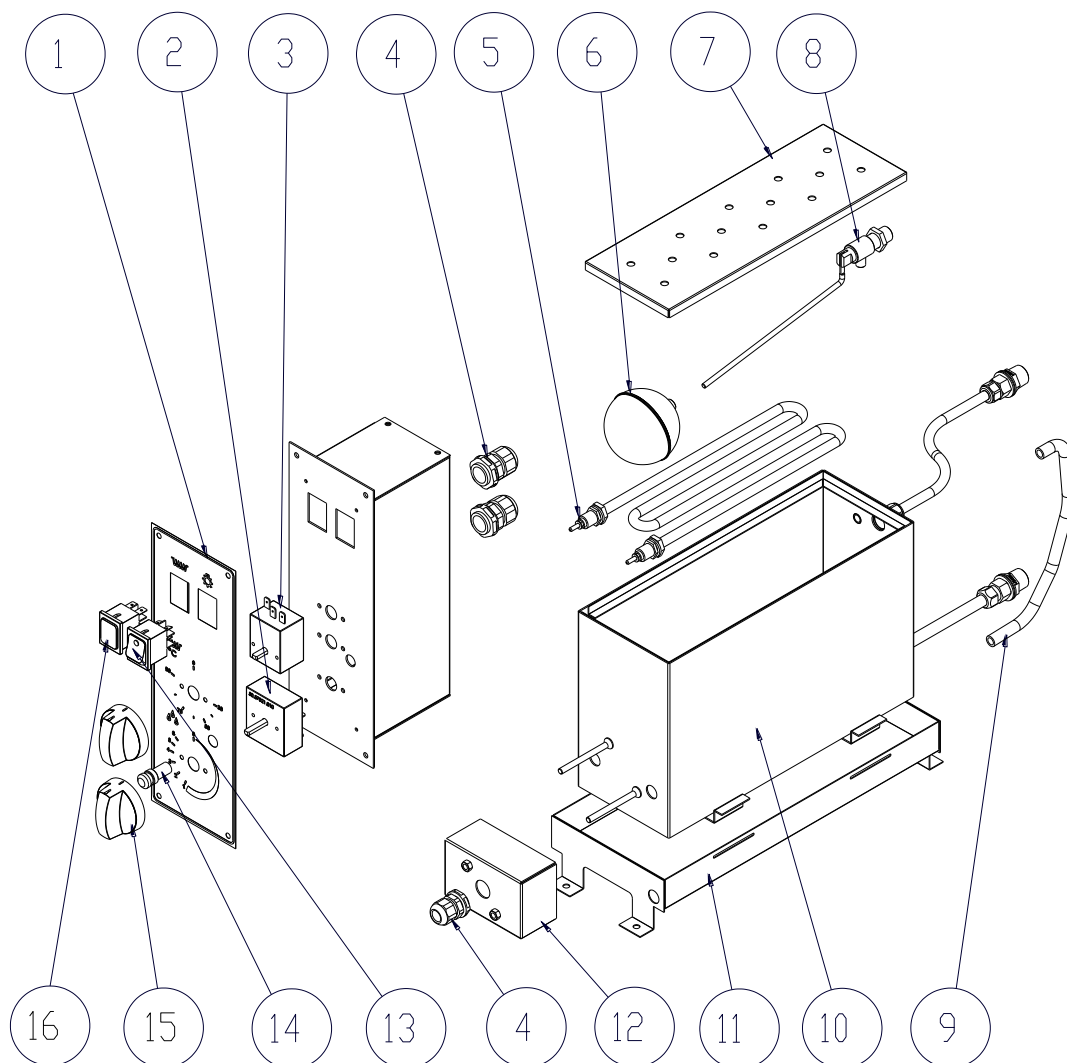


Fig. 10.2 Humidifier exploded view (optionally)

N°	Description	Codes
1	PROOFING CABINET CONTROL PANEL	PANN0525
2	ENERGY REGULATOR	TERM0050
3	THERMOSTAT 0-90° CHAMBER	TERM0002
4	FAIRLEAD PG13.5	ELET0090
5	CHAMBER HUMIDIFIER RESISTANCE	RESI0016
6	HUMIDIFIER BALL FOR FLOATING	GASI0011
7	LID	CAR1704
8	HUMIDIFIER FLOATING BAR 3/8"	GASI0013
9	SILICONE PIPE	GUAR0035
10	HUMIDIFIER TANK	CARP1706
11	HUMIDIFIER DRAINING TANK	CARP1703
12	CONNECTION LID HUMIDIFIER'S RESISTANCE	CARP1705
13	BIP LIGHTING SWITCH 0-1	INTE0037
14	ROUND LIGHT LAMP	LAMP0069
15	THERMOSTAT KNOB, ENERGY REGULATOR	MANI0110
16	LIGHT LAMP	LAMP0068

TAB. 10.2 pare-parts list prover with humidifier (optionally)



Separate collection. This product must not be disposed of with normal household waste. Local regulations may provide for separate collection of this kind of product