



MOD : VBME-2X

Production code : BMV 20 I

05/2026

INSTRUCTIONS FOR USE AND INSTALLATION BAIN MARIE DISPLAY



VBME-2X

**Fabrication française
Made in France**

Février 2026

BAIN MARIES DISPLAYS VBME-2X / VBME-3X

Congratulations on your purchase of this upmarket cooking appliance made in France. You have chosen an appliance that combines the best technical qualities with great comfort of use. We wish you the greatest satisfaction.

1. SAFETY INSTRUCTIONS

Please follow these instructions carefully to avoid any risk of fire, electric shock, burn or other injuries and damages. When using this machine, basic safety precautions should always be observed, such as:

- Never leave the appliance unattended.
- Always keep the operating instructions with the appliance.
- Always install the appliance in accordance with the instruction. A minimum distance of 10 cm from the wall or partition is required.
- Protect the appliance from direct sunlight, frost and moisture.
- Do not leave the appliance within the reach of children or infirm persons without supervision.
- Ensure that only trained staff use the appliance.
- Never move the appliance while it is in operation or when the cooking areas are still hot.
- Make sure the appliance is definitely off before connecting it up or disconnecting it.
- Do not touch the hot surfaces of the appliance. The temperature of the hot surfaces can be very high when the appliance is switched on. Always use handles and control knobs.
- Do not use the unit for anything other than the intended use.
- Do not leave the cord in contact of hot surfaces.
- The appliance must not be used near combustible materials.
- During use, make sure not to obstruct ventilation openings of the appliance.
- Never connect your bain-marie before having filled the container with water. The recommended level is between mini and maxi position.
- Always check water level and add some if necessary.

- To avoid any electric shock, never immerse the appliance, the cord or plug in water or any other liquid.
- If the cord is damaged, it must be replaced by the manufacturer, his after-sale service or skilled persons to avoid any risk.
- Repairs should only be carried out by a qualified person.
- Use only original spare parts.
- At the end of cooking, in order to clean the appliance, do not forget to disconnect it.

2. CONTENTS OF PACKAGING CARTON

Device: a bain-marie display

Accessory: - The present note

Options: 2 containers GN 1/1 for VBME-2X, 3 containers GN 1/1 for VBE-311/N

See exploded views of VBE-211/N and VBE-311/N at the end of the document.

3. CONFORMITY OF USE

Use the device only to keep warm vegetables, soups, rice, ready-made dishes and other meals.

4. OPERATING MODE


These Bain-Marie displays, completely panoramic, mixing the heating from the bottom bain-marie with the ceramic resistance in the upper part enable you to keep warm vegetables, rice, soups.... warm while following hygienic standards.

The VBE-211/N and VBE-311/N are fitted with one commutator (n°1 on picture), a temperature regulating thermostat (n°3 on picture) and a regulator (n°5 on picture).

With bain-marie cooking, food is not in direct contact with the heating source (heating elements are placed under the container) but are cooked or kept warm thanks to the water.

The complete draining is possible thanks to the tap placed on the front of the device. Thanks to the stainless-steel construction, it is possible to built-in these displays in a cooking table or into an MS service furniture.

a) Functioning of VBME-2X and VBME-3X:

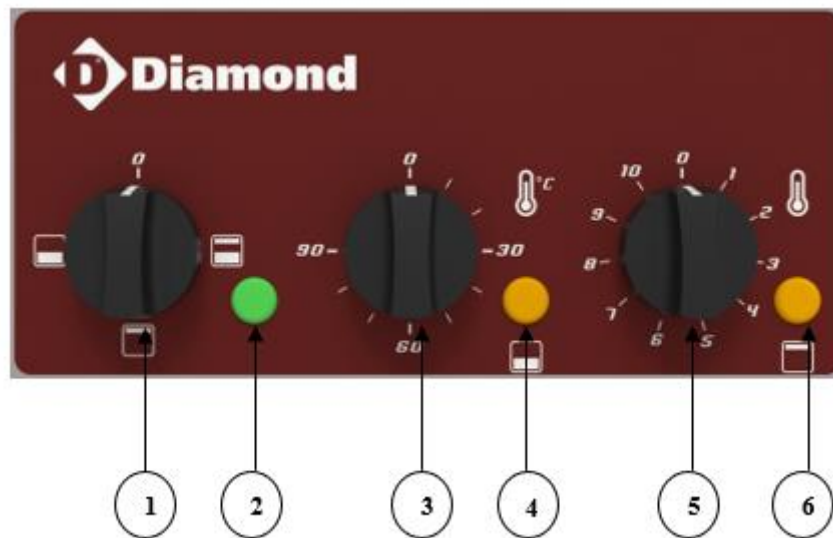

- | | |
|--------------------|---|
| 1 Commutator | 2 Green power pilot light |
| 3 Tank thermostat | 4 Orange thermostatic pilot light |
| 5 Energy regulator | 6 Orange pilot light of upper resistances |

To turn on your bain-marie, put the commutator to the desired position (n°1 on picture). The device is powered on, the LED lamps and the green pilot light (n°2 on picture) lights up.

Turn the thermostat (n°3 on picture) on the desired position, the orange pilot light (n°4 on picture) lights up for heating the Bain Marie.

When water reached the wished temperature, the orange pilot light (n°4 on picture) switches off, you can use your machine (setting the thermostat on maximum position won't accelerate the warming up of the machine).


To activate the temperature maintenance of the upper shelf, turn the regulator to the desired position. The orange pilot light (n°6 on picture) lights up when the ceramic elements heats.

When water reached the wished temperature, the orange pilot light (n°4 on picture) switches off, you can use your machine (setting the thermostat on maximum position won't accelerate the warming up of the machine).

To activate the temperature maintenance of the upper shelf, turn the energy to the desired position. The orange pilot light (n°6 on picture) lights up when the ceramic elements heats.

b) Operation of ventilation grids

The ventilation grids on the top of the bain-marie can be opened and closed to regulate the humidity level in the display case and adapt to the exterior moisture. To be able to handle them, open the door.

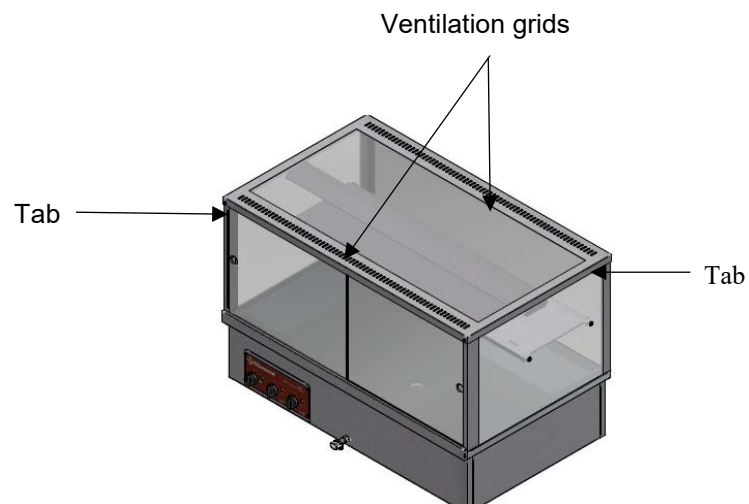

Open



Close



c) Removal of doors

- Fully open the door to the right.
- Check out the removable slide lifting it upwards (photo n°1) the rail is accessible.
- Remove the rail located on the left part of the device (photo n°2). The one on the right is fixed.
- Push the door to the left to release it completely from the rail (photo n°3).
- Without letting go of the window, move the bottom towards you (photo n°4), then carefully remove the window.
- For the 2nd door, repeat the previous operation.

Photo n°1



Photo n°2



Photo n°3

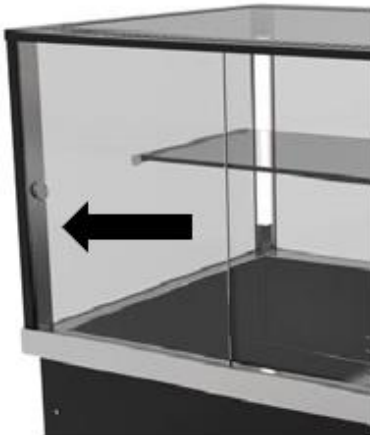


Photo n°4



5. OPERATING / HANDLING

a) Installation / assembly:

- Carefully unpack the machine from its carton.
- Place the bain-marie on a flat heat-resistance surface. This machine cannot be used placed directly on the floor.
- Never place the machine near a wall or partition made of combustible materials, even if it is very well insulated.
- A minimum distance of 10 cm from the wall or partition is required.
- Place the machine to enable easy access to the plug.
- Remove the protective film from the stainless-steel parts and from the plexiglass doors.

b) First use:

Clean the device before the first use (See 6 Cleaning).

Always filled in the tank before connecting the device.

Use advice

Check regularly the water level.

Never use the machine without water, it can destroy the heating element and cause an irreversible deformation of the container.

During a prolonged non-use (several days), we recommend you strongly to empty the container to avoid evaporation of water and scale deposit.

To avoid quick evaporation, cover the whole tank with containers or lids.

Connecting the appliance

- Check that the voltage and the frequency of the electricity network match with the values on the descriptive plate.
- Check that neither the cord nor the plug is damaged. If necessary, it should be replaced by the manufacturer, its after sales service or any similarly qualified person to avoid any risk.
- Make sure that every control knob is set on 0.
- Completely unwind the electric power cable and connect it in a plug connected with the earth.
- The device is connected.

NB: in case of connection of the device in a plug without earth protection or directly on the electricity network, let make its connection by a qualified person.

c) Use of device:

Operating elements and display

Command/Display	Function
Commutator	Starting up the bain-marie (Led bottom heating element, ceramic heating element)
Green pilot light	Machine on (pilot light on) Machine off (pilot light off)
Thermostat	Temperature setting
Orange pilot light	Water is warming up (pilot light on) Wished temperature reached (pilot light off)
Energy regulator	Heating up the ceramic heating element

Putting on VBME-2X and VBE-311/N

Turn the switch to the desired position (left for the tank, bottom for the shelf, right for the both). The green indicator light and LEDs will illuminate. The appliance is powered on.

Turn the thermostat (n°3 for the tank) to the desired position: the orange indicator light will illuminate: the water is heating. When the desired temperature is reached, the orange indicator light will turn off.

Turn the energy regulator to the desired position. The orange indicator light will illuminate. The ceramic heating element is heating.

Temperature setting

Set the temperature by positioning the thermostat to the desired setting.
Be careful: if the temperature is too high, water is going to evaporate quickly.
Think to cover the whole tank to limit water evaporation.

Stopping the appliance

Set the thermostat to 0.
Set the energy regulator to 0.
Set the switch to 0: the LED lights and the bain-marie are off.
Unplug or turn off the power
Let the device cool.
Clean the appliance (See 6. Cleaning)

d) Breakdown / repair:

In the event of a breakdown or damaged part, please call your after-sales service and entrust all technical operations to qualified person.

When you contact the service department of your Distributor or a shop, please give them the complete reference number of your appliance (commercial designation, type and serial number). This information can be found on the nameplate on the back of the machine.

6. CLEANING AND MAINTENANCE

Unplug the machine

- Let the machine completely cool down before any technical or cleaning work.
- Regularly clean the external walls of your appliance with hot water and washing-up liquid: avoid the abrasive sponges. Rinse your appliance with a wet sponge.
- Never clean your appliance under a water jet, the infiltrations could damage it irreparably.
- Never immerse the device, the cord or the plug in the water or quite other liquid to avoid any electric shock.
- Regularly change the water to avoid any scale deposit
- Never use abrasive product or vinegar; it could damage the container in irremediable way.
- If not used for a long period of time, we strongly recommend you to keep the appliance away from moisture.

7. TECHNICAL SPECIFICATIONS

Models	VBME-2X	VBME-3X
Outside dimensions mm	700x607x675	1030 x 607 x 675
Weight	43 Kg	55 kg
Power	3000 W	3500 W
Nb element	2	2
Current	13 A	15 A
Voltage	220-240 V ~	220-240 V ~

Wires colour correspondence

Phase
Neutral
Earth

Brown / Black / Grey
Blue
Yellow-Green

8. NORMS AND LEGALS DISPOSALS

The device is conformed to:

IEC/EN 60335-1
IEC/EN 60335-2-50
EN 55014-1 + 55014-2
EN 61000-3-2 + 61000-3-3

9. ELIMINATION OF THE ELECTRIC AND ELECTRONIC WASTE

The device respects the directives:

2002 / 96 / CE (DEEE) N°34270064800021
2002 / 95 / CE (ROHS)
2006/95 CE
2004/108 CE



Reach regulation

Do not dispose of the appliance in household waste.

The appliance must be put down in a centre of recycling for the electric equipment.

The materials of the device are reusable. By properly disposing the electric and electronic wastes, recycling any other shape of re-use of equipment, you are making a significant contribution to environmental protection.

For any information about the collection of electric and electronic waste, please contact your distributor.

10. WARRANTY

Warranty conditions

The warranty that applies to any appliance is the distributors or the dealer's commercial warranty.

Please contact the shop where you purchased your appliance for exact terms and conditions.

The warranty does not entitle you to any claims for damages.

The following provision are not exclusive of the benefit of the legal guarantee provided by articles 1641 and following of the Civil code relating to defects and hidden defects.

Clauses excluding the warranty

Incorrect installation and maintenance, especially if they do not comply with the regulations in force or the instructions in this user manual.

The warranty does not cover repairs required as a result of incorrect operations, improper use, negligence or overloading of the appliance, as well as repairs resulting from variations in the power supply, power surges and defective installations.

Damage due to shocks or bad weather is not covered by the warranty. The equipment travels at the user's risk; in the case of delivery by carrier, the recipient must express reservations to the carrier upon delivery of the appliance.

The guarantee ends in the event of intervention, repair, modification by unqualified persons, or use for inappropriate purposes.