

02/2019

Mod: WBB/30

Production code: DKS95-3/10-i

Model:

DKS95-2, DKS95-3



UK Contents

Important safety instructions	2
Unpacking and installation	2
Electrical connection	2
Start-up of the cabinet	2
Thermostat	3
Installation of BIB's	3
Maintenance and cleaning	4
Service	4
Disposal	4



Important safety instructions

1. To obtain full use of the cooler, we recommend reading this instruction manual.
2. It is the user's responsibility to operate the appliance in accordance with the instructions given.
3. Contact your dealer immediately in case of any malfunctions.
4. Place the cooler in a dry and ventilated place.
5. Keep the cooler away from strongly heat-emitting sources and do not expose it to direct sunlight.
6. Always keep in mind that all electrical devices are sources of potential danger.
7. Do not store inflammable material such as thinner, gasoline etc. in the cabinet.
8. We declare that no asbestos nor any CFC are used in the construction.
9. The oil in the compressor does not contain PCB.

Unpacking and installation

Carefully examine the cooler for shipping damage before discarding the packing material. If any damage is found, contact the delivery carrier immediately and have his agent prepare an inspection report for the purpose of registering a claim.

THIS IS YOUR RESPONSIBILITY.

Electrical connecting

The cooler operates on 230 V/50 Hz.

The wall socket should be easily accessible.

All earthing requirements stipulated by the local electricity authorities must be observed. The cooler plug and wall socket should then give correct earthing. If in doubt, contact your local supplier or authorized electrician.

The flexible cord fitted to this appliance has three cores for use with a 3-pin 13-Amp or 3-pin 15-Amp plug. If a B.S. 1363 (13-Amp) fused plug is used, it should be fitted with a 13-Amp fuse.

The wires in this mains lead are coloured in accordance with the following code:
Green/Yellow: Earth, Blue: Neutral, Brown: Live.

The main electrical connections must be done by skilled electricians.

Start-up of the cabinet

Before use, we recommend that the cooler is cleaned, see the section on maintenance and cleaning.

Important !

If the cooler has been vertically placed during transport, please wait 2 hours before starting up the cabinet.

Thermostat



The thermostat are placed behind the drip tray.
The setting can be adjusted between approx. 3 to 9 °C.
Turn clockwise to lower the temperature.

Installation of BIB's



Connect the BIB's to the silicone hoses.

Defrosting

The cooler defrosts automatically. Defrosted water runs to a container placed in the compressor compartment and evaporates.

Maintenance and cleaning

Switch the freezer off at the socket.

The cabinet must be periodically cleaned. Clean the external and internal surfaces of the cabinet with a light soap solution and subsequently wipe dry.

Do NOT use cleansers containing chlorine or other harsh cleansers, as these can damage the surfaces and the internal cooling system.

Do NOT hose the compressor compartment with water as this can cause short circuits and damage on the electrical parts.

Service

The cooling system is a hermetically sealed system and does not require supervision, only cleaning.

If the cabinet fails to cool, check if the reason is a power cut.

If you cannot locate the reason to the failure of the cooler, please contact your supplier. Please inform model and serial number of the cabinet. You can find this information on the rating label which is placed inside the cabinet in the top right hand side.

Disposal

Disposal of the cooler must take place in an environmentally correct way. Please note existing regulation on disposal. There may be special requirements and conditions which must be observed.

